

MAGNASONIC

For Customer Assistance, please send your email to :

Pour joindre le Soutien à la clientèle, veuillez envoyer votre courriel à :

MM178K

support@magnasonic.com

Auto Time Set Dual Alarm Projection Clock Radio

Radio Réveil – Double Alarme – Projection Heure

USER'S GUIDE GUIDE DE L'UTILISATEUR



Thank you for your purchase of this Magnasonic product. Please read this Instruction Manual carefully before using product to ensure proper use. Keep this manual in a safe place for future reference.

Merci d'avoir fait l'achat de cet appareil Magnasonic. Veuillez lire le présent guide attentivement avant de faire fonctionner l'appareil pour vous assurer de l'utiliser correctement. Conservez le présent guide dans un endroit sûr afin de pouvoir vous y référer au besoin.

www.magnasonic.com

WARNING:

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION:

Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.



CAUTION - TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



WARNING

DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD

This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

TABLE OF CONTENTS

Warnings	2
What's Included	3
Important Safety Information	4
Product Illustration	5
Power Connection	6
Operation	6
Setting the Time Zone	6
Changing Time Zone	6
Setting Time and Date	6
Setting Alarm Time	6
Setting Alarm ON / OFF and Type	6
Alarm Duration / Snooze Button	7
Changing Display Content Sleep	7
Function	7
Daylight Savings Time Function	7
Changing Temperature Display Format	7
Radio Operation	7
Reset Function	7
Projection Unit	8
Infrared Sensor Operation	8
Specifications	9
Warnings	9
Magnasonic Warranty	10

 
WHAT'S INCLUDED

- Clock Radio
- User Manual
- 1 x CR2032 Battery

IMPORTANT SAFETY INFORMATION

WARNING

 
 
 
TO PREVENT ELECTRIC SHOCK; DO NOT USE THIS PLUG WITH AN EXTENSION CORD RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURES. TO PREVENT FIRE OR SHOCK HAZARD; DO NOT INSTALL THIS PRODUCT IN A CONFINED SPACE SUCH AS A BOOK CASE OR SIMILAR UNIT.
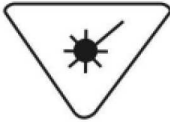
<p style="text-align: center;">LASER SAFETY</p> <p>This unit uses a laser. Only a qualified service technician should remove the cover or attempt to service this product to avoid possible eye injury.</p> <p style="text-align: center;">CAUTION: USE OF CONTROLS OR ADJUSTMENT OF PERFORMANCE OR PROCEDURES OTHER THAN SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.</p>	<p style="text-align: center;">DANGER:</p> <div style="text-align: center;"></div> <p style="text-align: center;">INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK FAILED OR DEFEATED. AVOID DIRECT EXPOSURE TO LASER BEAM.</p>
---	--

CAUTION: RETAIN THIS MANUAL FOR FUTURE REFERENCE

1. Read these instructions.
2. Keep these instructions.
3. Read all warnings.
4. Follow all instructions.
5. Do not use this product near water.
6. Clean only with a dry cloth.
7. Clean the screen only with a dry cloth, moistened slightly if needed. Do not clean the inside of the product.

PRODUCT ILLUSTRATION

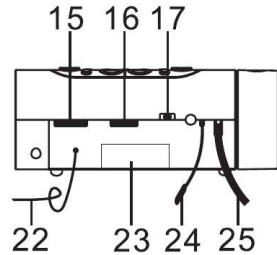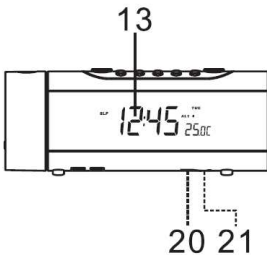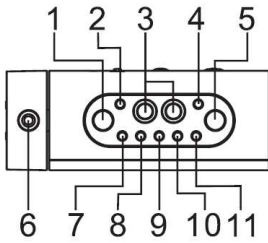

1. SNOOZE / SLEEP / TIMEZONE button
2. << / MONTH – DAY / °C °F button
3. INFRARED SENSOR
4. >> / YEAR / DST button
5. ON / OFF button
6. PROJECTION UNIT
7. AM / FM BAND button
8. ALARM 1 RADIO / BUZZ button
9. ALARM 2 RADIO / BUZZ button
10. ALARM SET button
11. MODE button
12. FOCUS ADJUSTMENT for PROJECTION
13. LCD DISPLAY
14. SPEAKER
15. TUNING knob
16. VOLUME knob
17. DISPLAY AUTO OFF / LOW / HIGH switch
18. PROJECTION TIME 180° FLIP button
19. PROJECTION ON / OFF button
20. BATTERY COMPARTMENT
21. RESET button
22. FM ANTENNA
23. RATING label
24. TEMPERATURE SENSOR (INSIDE DOOR)
25. AC POWER CORD

SPÉCIFICATIONS

Fréquence	AM 530 – 1700 kHz FM 88 – 108 MHz
Pile de Recharge	1 – 3V CR2032 pile plate au lithium (non-incluse)
Alimentation	120 V C.A. ~ 60 Hz, 5 W

AVERTISSEMENT

- Aucune source de flamme ou de chaleur ne devrait être placée sur l'appareil.
- Ne placez pas le produit sur des étagères fermées ou des casiers sans ventilation appropriée.
- Ne branchez pas l'adaptateur sur une prise murale qui ne soit pas fonctionnelle et prête à être utilisée.
- Ne couvrez pas l'appareil avec un tissu ou une couverture, le produit doit être capable de se ventiler.
- N'exposez pas l'appareil à l'eau, aucun vase ou objet humide ne devrait être placé au dessus de l'appareil.
- L'appareil ne devrait pas être exposé au soleil, à des températures très élevées ou très basses, à l'humidité, à des vibrations, ou placé dans un environnement poussiéreux.
- N'utilisez pas de substances abrasives, de benzène, de diluant, ou d'autres solvants pour nettoyer la surface de l'appareil. Utilisez uniquement une solution nettoyante douce sur un chiffon propre et doux.
- Ne tentez jamais d'insérer des fils, des épingles, ou d'autres petits objets dans les voies d'aération ou les ouvertures de l'appareil.
- Un danger de corrosion de la pile existe si la pile n'est pas correctement remplacée avec le bon type de pile et/ou la bonne configuration.