


MF41 Mini Fridge

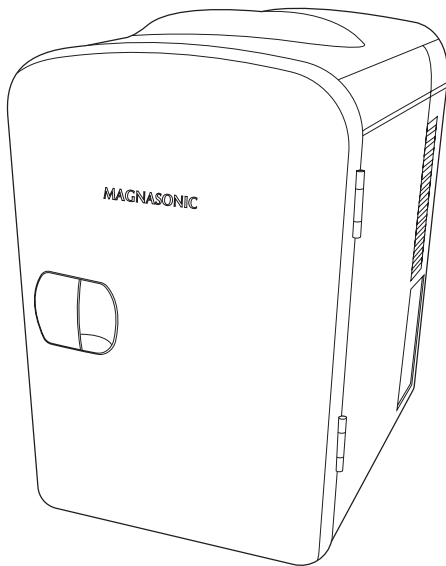

Thank you for your purchase of this Magnasonic product. Please read this instruction manual carefully before using product to ensure proper use. Keep this manual in a safe place for future reference.

TABLE OF CONTENTS

Product Specifications.....	3
Application.....	3
Important Information.....	4
Using in a Vehicle.....	5
Using at Home.....	5
Troubleshooting.....	6
Magnasonic Warranty.....	7
FCC Statement.....	9

PRODUCT SPECIFICATIONS

Dimensions (Internal)	8.5 (H) x 5.8 (W) x 5.4 (D) inches
Dimensions (External)	10.5 (H) x 9.8 (D) x 7.2 (W) inches
AC Cord Length	48.8 inches
DC Cord Length	80.7 inches
Weight	4.4 lbs
Warming Temperature	Up to 131°F (55°C) – thermostat protection protects overwarming
Cooling Temperature	36°F (20°C) below room temperature
Power Supply	AC 110V & DC 12V power cords (included)
Volume Capacity	4.0L/1.1 gal (6 x 12oz cans)
Fan	Internal circulation, brushless motor, long life
Insulation	100% CFC & HCFC free foam
Warming	DC 12V – 32W, AC 110V – 40W
Cooling	DC 12V – 40W, AC 110V – 45W

APPLICATION

- Picnics
- Camping trips
- Car rides
- Boat
- Student dorm
- Office
- Home
- Food and beverage storage

IMPORTANT INFORMATION

1. Switching between WARM and COLD may damage the fridge. Please allow at least 5 minutes of rest time before switching between WARM and COLD.
2. Ensure that there is at least 6 inches of clearance space between the back of the fridge and any wall/obstruction to allow for proper ventilation. This will help to prevent overheating.
3. Ensure the fridge is switched to OFF prior to connecting power. (See fridge use below)
4. Please ensure that the fan is clear of any dust or debris while in use.
5. Please ensure that the power cable is firmly inserted into the socket or wall outlet before turning on.
6. Keep this fridge away from flammable items and damp areas.
7. Do not disassemble the fridge.
8. Do not rinse or submerge in water.
9. Do not drop the fridge.

USING IN A VEHICLE

1. Ensure that the switch on the fridge is set to OFF.
2. Vehicle must be running before turning on the fridge.
3. Plug the included DC power cord into the DC socket on the fridge.
4. Insert the opposite end of the DC power cord into the 12V DC cigarette lighter in your vehicle.
5. To cool, move the switch at the back of the fridge to COLD. A green light will turn on, indicating that it is now in cooling mode.
6. To warm, move the switch at the back of the fridge to WARM. A red light will turn on, indicating that it is now in warming mode.

USING AT HOME

1. Connect the included AC cord to AC socket on the fridge.
2. Plug the other end of the AC wall plug into a wall outlet.
3. To cool, move the switch at the back of the fridge to COLD. A green light will turn on, indicating that it is now in cooling mode.
4. To warm, move the switch at the back of the fridge to WARM. A red light will turn on, indicating that it is now in warming mode.

TROUBLESHOOTING

Issue	Solution
No power	Disconnect and reconnect the power cord.
	Ensure the cord is securely attached to the fridge and seated firmly in the outlet/socket.
	Check that the WARM/OFF/COLD switch on the fridge is set to either WARM or COLD.
Not cooling	Check that the WARM/OFF/COLD switch on the fridge is set to COLD.
	Allow it to run for a minimum of 2 hours before it reaches optimal cooling temperature.
Not warming	Check that the WARM/OFF/COLD switch on the fridge is set to WARM.
	Allow it to run for a minimum of 2 hours before it reaches optimal warming temperature.
Fan not turning	Ensure the fan is clear of any debris/blockage.
	Disconnect and reconnect the power cord.
	Ensure the fan has at least 6 inches of clearance between the back of the fridge and any wall/obstruction.
	Ensure the cord is securely attached to the fridge and seated firmly in the outlet/socket.

MAGNASONIC WARRANTY

Thank you for choosing Magnasonic. We guarantee your investment in our products is a solid one! Extensive thought, research, planning, and design goes into every product we make. High quality components combined with precision manufacturing allows us to maintain the highest possible production standards. All items are guaranteed against defects in materials and craftsmanship.

Magnasonic products come with a complete one year parts and labour warranty. This warranty is non-transferable and proof of purchase from an authorized Magnasonic dealer is required when seeking warranty assistance. Magnasonic has outstanding quality control, if something should go wrong with any of our products, we will repair it free of charge! If the product cannot be repaired, we will replace the product. If the product has been discontinued, we will replace the product with either the newest version of said product or current equivalent. Replacement parts furnished in connection with this warranty shall be warranted to a period equal to the unexpired portion of the original product warranty.

This warranty shall not apply to:

- A. Any defects caused or repairs required as a result of abusive operation, negligence, accident, improper installation or inappropriate use as outlined in the owner's manual.
- B. Any Magnasonic product tampered with, modified, adjusted or repaired by any party other than Magnasonic.
- C. Any cosmetic damage to the surface or exterior that has been defaced or caused by normal wear and tear.
- D. Any damage caused by external or environmental conditions, including but not limited to transmission line/power line voltage or liquid spillage.

- E. Any product received without appropriate model, serial number, and CSA/cUL/cULus/cETL/cETLus markings.
- F. Any products used for rental or commercial purposes.
- G. Any installation, setup and/or programming charges.

If in any situation your purchase displays a manufacturer's defect during the warranty period and does not function correctly, Magnasonic will repair your product and cover all parts, labour, and return costs upon delivery of the Magnasonic product together with proof of purchase. Products returned to Magnasonic for warranty service must be shipped prepaid (paid by customer). Products must be shipped in the original shipping container or its equivalent; in any case the risk of loss or damage in transit is to be borne by you.

We believe everyday experiences should be extraordinary. We pledge to work with you in resolving any issue that occurs with your product. If you are in need of assistance do not hesitate to visit our support page www.magnasonic.com/support/.

FCC STATEMENT



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

MAGNASONIC

www.magnasonic.com