 


All-In-One 24MP Film Scanner with HDMI

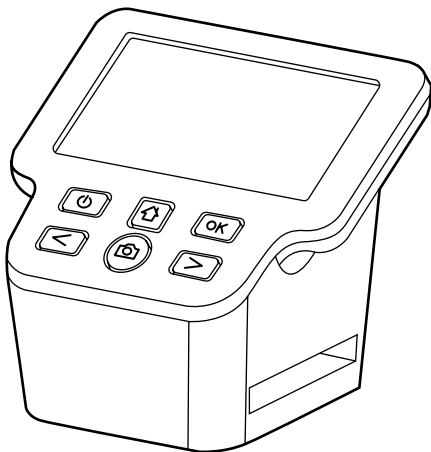

Thank you for your purchase of this Magnasonic product. Please read this user manual carefully before using product to ensure proper use.
Keep this manual in a safe place for future reference.

magnasonic.com/support

We reserve the right to change models, configurations, or specification without notice or liability. Product may not be exactly as shown. © MAGNASONIC®, MAGNASONIC®, the MAGNASONIC® marks may be registered. All other trademarks are property of their respective owners

MAGNASONIC

Since 1954, Magnasonic has been a leader in developing innovative and unique products. We are dedicated to empowering people using six key fundamentals: superior quality, performance, simplicity, style, value and a fanatical obsession with outstanding customer service. At Magnasonic, our mission is a simple one – create people-driven products that make life's daily adventures easier and more fun. We believe everyday experiences should be extraordinary.

Thank you for your purchase of this Magnasonic® product.
We hope you enjoy your experience.

Help other make the right choice, leave a product review and share your experience.

Questions? Give us a chance to help, we're just a click away.



www.magnasonic.com/videos



 
www.magnasonic.com/resources



www.magnasonic.com/support



www.magnasonic.com/contact

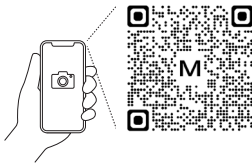

Scan this QR code for easy setup instructions, videos, and frequently asked questions.

Don't forget to register your product with us!
Receive faster, easier warranty assistance | Receive product safety or recall alerts

www.magnasonic.com/registration

www.magnasonic.com


Table Of Contents

What's Included.....	3
Product Information.....	4
Operating Instructions	6
Main Menu Icons.....	6
Cleaning and Care.....	7
Powering On Your Film Scanner	7
Changing The Language	8
Prepping Your Film/Slides	8
Using an SD Card.....	9
Scanning Your Images.....	9
Viewing Your Scanned Images.....	10
Watching Saved Images From a TV Screen.....	11
Downloading Images To Your Computer	11
Formatting Your SD Card.....	12
FAQ / Troubleshooting.....	13
Specifications.....	14
Magnasonic® Warranty.....	15
Important Safety Instructions.....	17
Safety Alerts	17
Best Practices for Safe Use	17
Cleaning and Care.....	18
FCC/HDMI Information.....	19


What's Included

- 24MP All-In-One HDMI Film Scanner
- Slide Adapter
- Negative Film Adapter
- 110 Slide Insert
- 110 Film Insert
- Super 8/8mm Insert
- Mini USB-to-USB Cable
- Cleaning Brush

 
Product Information

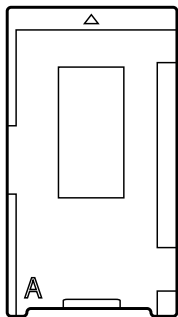


Negative Adapter

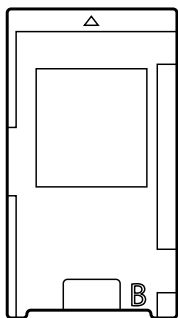 


Slide Adapter

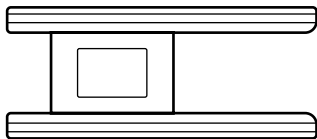 

110 Slide Insert

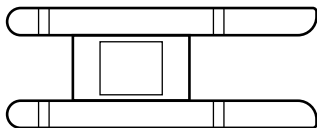 


110 Film Insert

 


Super 8/8mm Insert

Product Information

 Front

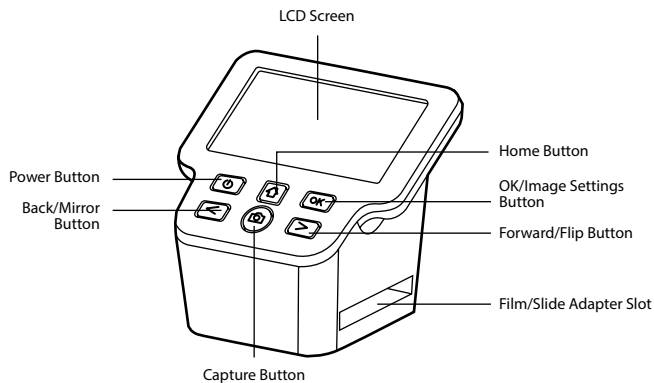

Back

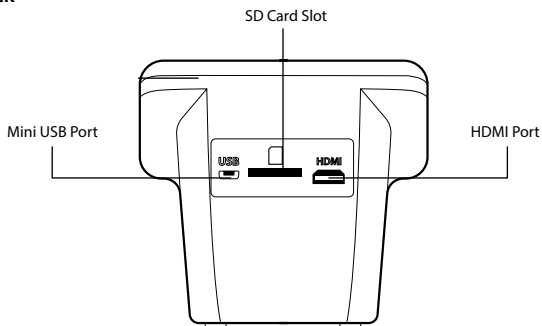 

Main Menu Icons



Capture Images



Gallery



Format SD Card



Connect to PC



Language Setting



Film Type Setting

 


Resolution Setting

Operating Instructions


Cleaning and Care

Use the included cleaning brush to ensure there is no dust or debris on the lens. Insert the soft end of the brush, face down, into the film/slide holder slot. Carefully push the brush around inside to get rid of any dust or debris that may be on the LED backlight.

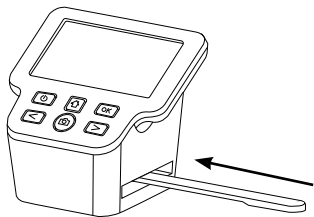


Powering On Your Film Scanner

 1. Using the included mini USB to USB cable, connect the mini USB plug to the mini USB port on the film scanner.
2. Connect the other end of the USB cable into a USB wall adapter (not included) or USB power source (5V 1A).
3. Press the power button on the scanner to turn it on.

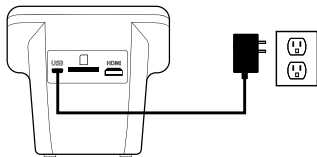

Changing The Language

 1. On the main menu, go to Language.
2. You may now select the language of your choice by using the < and > buttons to scroll between the available selections.
3. Press the OK button to select the language.

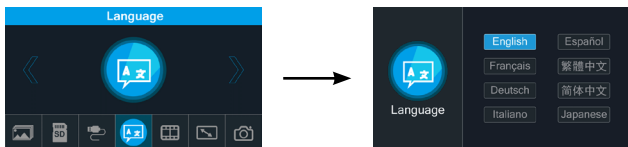

Prepping Your Film/Slides

1. Insert your slide or film into the appropriate slide or film adapter. If you are unsure what adapter to use, on the film scanner menu go to Film Type then choose the film or slide type you are going to scan. There will be images of the corresponding film or slide adapter you can reference.



2. Ensure the slide/film is facing the correct way and is not bent.
3. Close the slide or film adapter and press the edges so that it locks into place.

 
Note: This scanner has 128MB of built-in memory available to store approximately 50 scanned images. This film scanner will also accept SD, SDHC, and SDXC cards with a maximum of 128GB for extra memory.

Note: If you are using a 128GB SD card, it may need to be formatted before using for the first time. Please see page 12 for formatting instructions.



Using an SD Card


Insert the SD card, face down, into the SD card slot located at the back of the film scanner. The SD card will click in automatically if inserted properly.

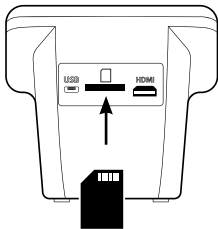


Remove the SD card by pressing on it until it clicks and pops out, then remove it from the slot.



 Scanning Your Images

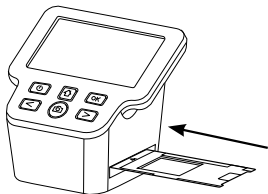
1. Press and hold the power button  for 3 seconds on the scanner to turn it on.
2. Insert the prepared film or slide adapter into the slot on the right side of the film scanner.
3. Select your film/slide type that you are scanning by going into Film Type on the scanner's menu, go to your corresponding film/slide and press the OK button.
4. Once you have selected your film or slide type, hit the  button to go back to the main menu.
5. Go to Capture to begin scanning your images. Press the OK button.
6. You should now see your film or slide image on the screen.



7. To adjust brightness or color, press the OK button. Use the left and right arrow buttons to move between brightness, red, green, or blue. Press the OK button to adjust them up or down.
8. When ready, press the  button to return to your image.
9. You can also mirror or flip your image prior to scanning and saving your image by pressing the left (mirror) or right (flip) buttons.
10. To capture and save your image, press the  button again.
11. You can press the  button to return back to the main menu when your scanning is done.

Viewing Your Scanned Images

 1. To view your scanned images, go to Gallery and press the OK button.
2. Your images will play automatically.
3. To manually review your saved images and stop the auto-play, press the OK button again.
4. Use the left and right buttons to scroll through each saved image.
5. To delete the scanned image press the OK button to open the menu, then press the right arrow and press OK to select Delete. The image will be permanently deleted from the scanner.

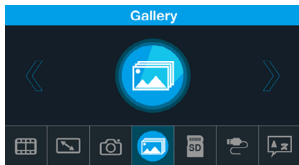


Watching Saved Images From a TV Screen

1. Turn on the film scanner.
2. Using an HDMI to HDMI cable (not included), connect the HDMI plug into the HDMI port at the back of the film scanner.
3. Connect the other end of the HDMI cable into the HDMI port on your TV.
Note: When you connect the film scanner to your TV via HDMI, the scanner's LCD screen will turn off automatically.
4. Ensure that your TV is set to the proper HDMI input/video source.
5. You should now see your saved images on your TV.

Downloading Images To Your Computer

 1. Ensure your computer is powered on.
2. Connect the film scanner to your computer via the included mini USB cable.
3. Turn on the film scanner.
4. In the film scanner menu, select USB Upload.

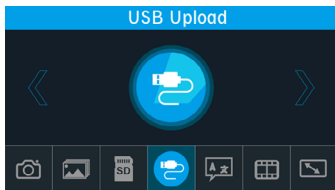


5. A new folder will appear on your computer. Your saved images can be found here. You can now move these images from your scanner directly onto your computer.

Formatting Your SD Card

WARNING: Formatting your SD card will delete all files stored on the SD card. Download your files from your SD card to your computer before formatting.

 1. In the main menu, go to Format press the OK button.
2. When prompted if you would like to format the media, use the < button to choose "Yes". Press the OK button to begin formatting the SD card.

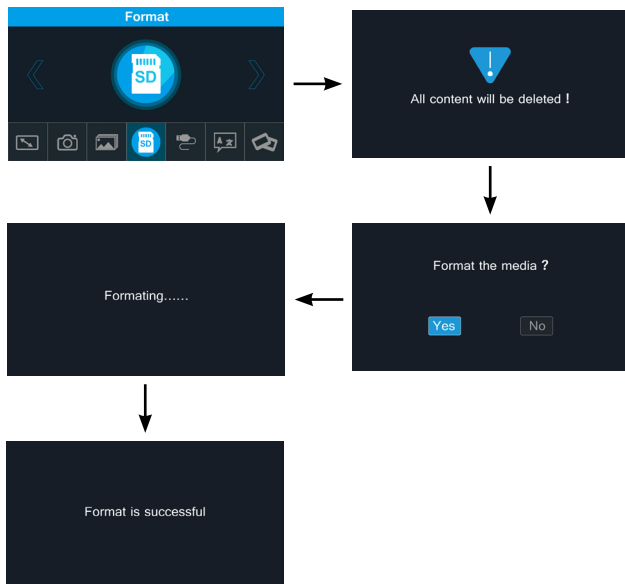

FAQ / Troubleshooting

Issue	Solution
How can I get the best quality scan possible?	Ensure the film/slides are clean and that you clean the inside of the scanner with the included cleaning brush immediately before scanning. See pg. 7 for instructions on how to use the cleaning brush.
How should I prepare the film/slides to ensure the best possible scan?	The film/slide should be free of any dust/fingerprints. This can be done with an appropriate cleaning cloth.
I've noticed a consistent spot on every slide I have scanned. Is something wrong with my scanner?	There is likely a small amount of dust inside your unit. Use the included cleaning brush to ensure there is no foreign debris. See pg. 7 for instructions on how to use the cleaning brush.
Do I need a computer to begin scanning?	Everything is plug-and-play right out of the box. You can save images to an SD card (up to 128GB) or the scanner's internal memory (64MB). You can then export to a computer at a time that is more convenient.
What file format are the images saved as?	The files are automatically saved in JPG format.
Can I use this to scan raw film or do I need to develop the negatives first?	The scanner will work for developed film only.

Issue	Solution
The scanner screen is black but it has power.	Ensure an HDMI cable is not connected to the back of the film scanner. Confirm the USB power source is 5V 1A and test with another USB power source.
There are red lines on the display and no image preview.	Confirm the USB power source is 5V 1A and test with another USB power source.

Specifications

Image Sensor	16.0 Mega Pixels (4920*3280) 1/2.3" CMOS sensor
Display	5" TFT LCD
Supported Film Type	Film: 35mm, 110, 126, and Super 8 Slides: 135, 110, and 126
Resolution	16.0 Megapixels/24 Megapixels (interpolation)
Picture Aspect Ratio	135/3:2, 126/1:1, 110/4:3, Super8/4:3
Image File Format	JPEG
Scanning Speed	2-3 Seconds
Internal Memory	128 MB (51 images)
External Memory Card	SD card up to 128GB
Power Input	DC 5V 1A
Dimensions	4.9 x 5.4 x 4.4 inches / 124.5 x 137.2 x 111.8 mm (HxWxD)
Weight	0.83 lbs

Magnasonic® Warranty

Thank you for choosing Magnasonic! We guarantee your investment in our products is a solid one. Our products come with a complete one-year parts and labor warranty. High performance components combined with quality craftsmanship allow us to maintain the highest possible production standards. All items are guaranteed against defects in materials and craftsmanship.

Magnasonic has outstanding quality control; if something should go wrong with any of our products, we will repair it free of charge within the warranty period. If the product cannot be repaired, we will replace the product. In the event that Magnasonic replaces a product under warranty, the replacement would only carry the original warranty from the original date of purchase.

Warranty Exclusions

Magnasonic products are warranted for parts and labor for one year from date of original purchase, and are subject to the terms and conditions of the warranty. Any refurbished products that are discontinued hold a 90 day warranty from the date of original purchase. Magnasonic warranties are valid for the original owner and are non-transferable.

- Any defects caused or repairs required as a result of abusive operation, negligence, accident, improper installation or inappropriate use as outlined in the owner's manual.
- Any Magnasonic product tampered with, modified, adjusted, or repaired by any party other than Magnasonic.
- Any cosmetic damage to the surface or exterior that has been defaced or caused by normal wear and tear.
- Any damage caused by external or environmental conditions, including but not limited to, transmission line/power line voltage or liquid spillage.
- Any product received without an appropriate model and serial number.
- Any products used for rental or commercial purposes.
- Any installation, set up and/or programming charges.
- Defect or damage as a result of connecting a product to an outlet with the incorrect voltage. Voltage converters must be used where applicable. (paid by customer).


To Obtain Warranty Service

Should your product require warranty service, please contact us at www.magnasonic.com/contact to set up a Return Authorization. Products returned without a valid Return Authorization number will be refused.

Magnasonic products must be returned in their original packaging. Our products are packaged specially to protect them from any damage during shipping, and without this packaging the return shipment could get damaged.

This warranty does not cover the shipping cost, insurance, or any other incidental charges. Products shipped for warranty service must be pre-paid by the customer, and Magnasonic will cover the cost to ship the repaired or replaced product back to the customer.

Important Safety Instructions

1. This unit has been designed and manufactured to ensure your personal safety. Use only for its intended use as described in this manual. Improper use can result in potential electrical shock or fire hazards. Read all safety and operating instructions carefully before installation and use. Keep these instructions for future reference. Take special note of all warnings listed in these instructions and on the unit.
2. Use only a mild cleaning solution and a clean, soft cloth. Always turn the product off before cleaning.
3. To reduce the risk of fire or electric shock, do not expose this apparatus to rain, water, or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus. Do not place or store the apparatus where it can fall or be pulled into a tub or sink. Do not reach for unit that has fallen into water. Unplug it immediately.
4. Only use attachments/accessories/replacement parts as specified by the manufacturer.
5. Ensure that the power voltage stated on the rating label corresponds to your local electricity supply.
6. The symbol with  indicates DC voltage.
7. Do not overload electrical outlet. Use only the power source as indicated.
8. The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
9. Unplug the apparatus during lightning storms or when unused for long periods of time.
10. Do not install this unit in places exposed to direct sunlight or close to heat radiating appliances such as electric heaters, on top of other stereo equipment that radiates too much heat, places lacking ventilation or dusty areas, places subject to constant vibration, and/or humid or moist areas.
11. Never expose this product to extremely high or low temperatures. Using the product in a 0-35°C environment is recommended. Shipping and storing the product in a 0-35°C environment is recommended.
12. Do not install this equipment in a confined space and maintain good

- ventilation conditions. The ventilation should not be impeded.
13. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged. Liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Cleaning and Care

1. Please make sure the scanner is clean before using.
2. Do not use liquid cleaners.
3. Do not use organic solvents such as alcohol, gasoline, or thinner, to clean the equipment.
4. Clean outside of the product only with a dry cloth.
5. Do not clean the inside of this product with anything except for the included cleaning brush.

FCC Information



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This unit may contain a microcomputer for signal processing and control function. In very rare situations, severe interference, noise from an external source, or static electricity may cause it to lockup. In the unlikely event that this should happen, turn off the unit, wait at least five seconds, and then turn it back on again.

HDMI Information



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. LLC in the United States and other countries.

magnasonic.com